

Deluxe Tambour Doors Fixing Instructions



PWS

DISTRIBUTED BY:
PWS
 P.O. Box 20, Station Road
 Aycliffe Industrial Park
 Newton Aycliffe
 Co. Durham
 DL5 6XJ

Tel: 01325 50 55 55
 Fax: 01325 50 55 00
 Email: mail@pws.co.uk

MANUFACTURED BY:
Rotalac Plastics Ltd
 Canal Road
 Timperley
 Altrincham
 Cheshire
 WA14 1TB

Tel: 0161 928 6411
 Fax: 0161 927 7856
 Email: enq@rotalac.com
 Website: www.rotalac.com


Re-order ref: PWS0002
 (Instruction sheet only)

⚠ WARNING: Do not apply adhesive tape to any of the stainless steel surfaces as it can leave unsightly permanent marks.

Made in Great Britain




1 Position the roller mounting brackets to top of cabinet and 22 mm back from edge of cabinet. The track can be used as a guide, secure with 5 x countersunk screws provided.

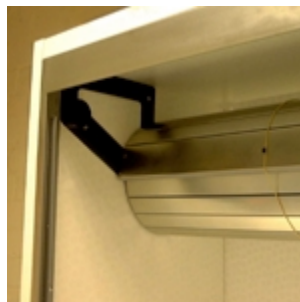


2 Remove protective foam and re roll tambour tightly but with care to avoid scratching, secure with a rubber band. Fit tambour into the mounting bracket



3 Locate tracks in position covering front edge using self adhesive tape and secure trough rear flange with pan head screws provided.

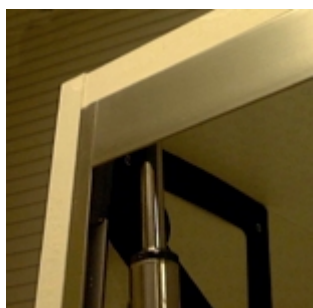

4 Locate fascia to top of cabinet using self adhesive tape and secure with pan head screws provided.

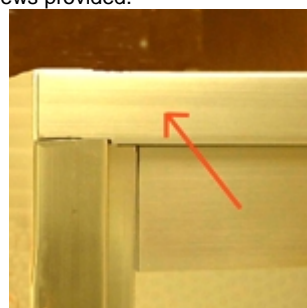

5 Fit top and bottom cover strips using self adhesive tape only.



6 Fit idler roller into roller mounting bracket. Smear petroleum jelly provided on the inside of the track to ensure smooth running.




7 Ensuring the flats are engaged. Cut the rubber band and rotate the shutter half a turn in the direction of the arrow.



8 Feed the tambour over the idler and down the track,



9 Fit handle from PWS range (not supplied with this kit)

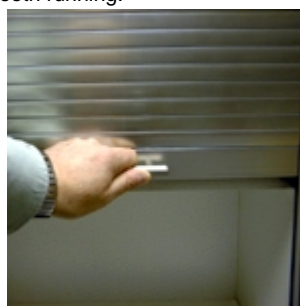

10 Test operation of shutter.

DELUXE KIT CONTENTS

Tambour	1
Roller Mounting Bracket	1 pair
Track	1 pair
Fascia	1
Cover Strips	2
Idler Roller	1
C/sunk Screws	10
Pan Head screws	14
Sachet Petroleum Jelly	1

Cleaning / Maintenance

Use non-abrasive cleaning products only on a soft cloth